



**Installation instructions for  
Straightline Performance Quick Shift Bearing.**

1. Install the side showing in the picture below against the spring.

