

# **STRAIGHTLINE**

## **PERFORMANCE**

### **Installation instructions for Straightline Performance Torsional Clutch Cover Kit.**

1. Remove the stock secondary, and remove stock helix.
2. Press out the pin holding the counterclockwise roller and install the new roll pin into the stock location. (as shown in #1)



#1



#2



When the new pin is installed it should protrude into the center as shown in the pic#2.

1. Install the torsional base with the groove down and line up with roll pin.
2. You are able to install the new helix, and spring. Spring will install into base hole. Install cover into your desired position and wind.
3. Be sure to lock tight all bolts into cover.

# **STRAIGHTLINE**

## **PERFORMANCE**

### **Installation instructions for Straightline Performance Torsional Clutch Cover Kit.**

1. Remove the stock secondary, and remove stock helix.
2. Press out the pin holding the counterclockwise roller and install the new roll pin into the stock location. (as shown in #1)



#1



#2



When the new pin is installed it should protrude into the center as shown in the pic#2.

4. Install the torsional base with the groove down and line up with roll pin.
5. You are able to install the new helix, and spring. Spring will install into base hole. Install cover into your desired position and wind.
6. Be sure to lock tight all bolts into cover.