


STRAIGHTLINE PERFORMANCE

151-101 Universal Spring Compressor

1. Place the clutch over the tool so the removable section of the clutch faces upward.
2. Install the steel spacer over the threaded shaft and thread the handle on the shaft.
3. Be sure the clutch is centered on the shaft during dis-assembly and re-assembly.

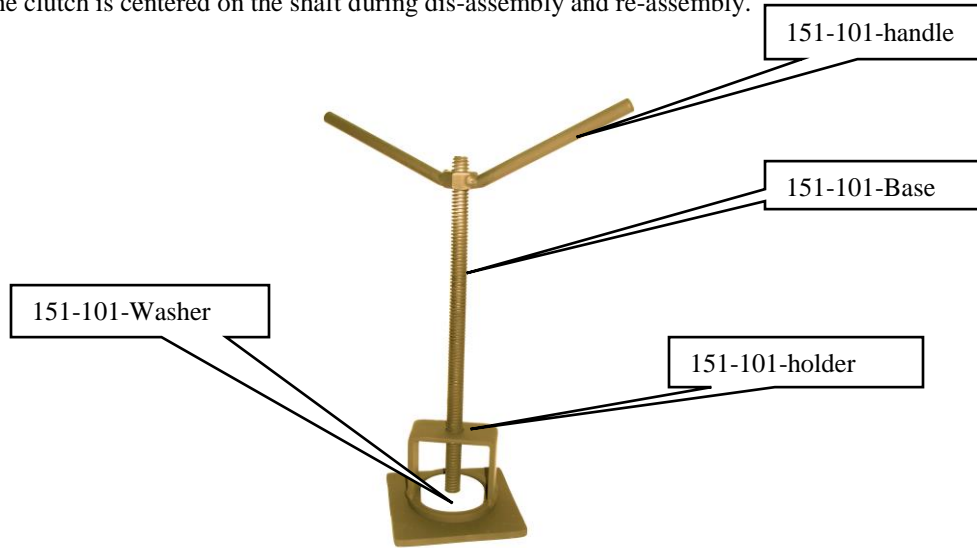

BOM:

Quantity	Part #	Descriptions	In Box
1	151-101-handle	Crank Handle	
1	151-101-Base	Complete Base and Rod	
1	151-101-Washer	Support Washer	
1	151-101-Holder	Clutch Holder/Compressor	
1		Sticker	

Checked and Packaged By

Straightline Performance 15250 Hornsby Rd Forest Lake, MN 55025 651-466-0212
www.straightlineperformance.com

Technical questions can be answered at tech@straightlineperformance.com



Facebook @ straightlineperformanceinc
 Youtube @ straightlineperfinc
 Twitter @ straightlineperf