

Disclaimer: Straightline Performance is not responsible for any damage due to improper installation.

Straightline Backup Lights Straightlineperformance.com Polaris Ranger Reverse Light Tech@straightlineperformance.com

V4

## Step 1: Mount Lights

- 1) Attach light bracket to light and tighten Allen bolt.
- 2) Remove the door bolts (13mm) and mount bracket as shown below.
- 3) Bolt the light bracket to the mounting bracket.
- 4) Remove Torx bolt, pull back plastic and feed the light connector into cab.
- 5) Reinstall Torx bolt









Straightline Backup Lights Straightlineperformance.com

Polaris Ranger Reverse Light Tech@straightlineperformance.com 2 of 6

### Step 2: Routing Wires

- 1) Remove the two plastic plugs and pull head-liner loose.
- 2) Run the wire cross-member behind the headliner, securing it sufficiently, and plug in the connectors.
- 3) Continue to run the wire down driver's side door along the OEM harness; if there are no preexisting wires, use Christmas Tree Zip Ties to fasten the wire as shown below (yellow circles).
- 4) Run wire behind seat and through grommet into battery storage area.



Straightline Backup Lights Straightlineperformance.com

Polaris Ranger Reverse Light Tech@straightlineperformance.com

## Step 3: Connect Diagnostic Connector & Power Leads

- 1. Push relay terminal into remaining slot of relay holder; then plug relay in.
- 2. Remove diagnostic connector cover and plug in connector that comes with reverse light wiring harness.
- 3. Connect positive lead to positive terminal of battery and negative lead to negative terminal using supplied locknuts.







Diagnostic connector

Straightline Backup Lights Straightlineperformance.com


Polaris Ranger Reverse Light Tech@straightlineperformance.com

# Step 4: Secure Controller, Relay, & Fuse

1) Secure the fuse, controller, and relay using zip ties.



#### **Automatic Reverse Light**

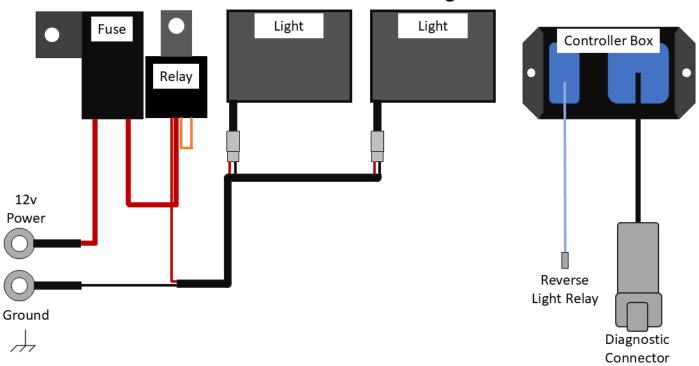

V4



### **Operation of Reverse Lights**

Our controllers have been programmed with a manual override feature. Back-up lights may be turned on without the vehicle in reverse.

- Fully Automatic When Shifted to Reverse
  - 1) No programming needed

### **Manual Override**

- 1) Put the vehicle in neutral.
- 2) Press and hold the brake pedal for up to 2 seconds. The reverse light will automatically turn on and stay on.

\*To turn the light off repeat this procedure.

**Note:** If the ignition is turned off while the vehicle is in reverse, or the manual override function is enabled, the lights will remain ON until the ECU enters sleep mode (approximately 30 seconds - 2 minutes depending on vehicle and ECU type).

Part number	Description	Quantity	In Box
PolVA-2	Polaris Diagnostics Adapter	1	
PolCA-1	4" jumper from harness to controller	1	
POL-V4.11	Polaris controller	1	
Ranger Instruction 2-01 V1	Ranger Instruction Card	1	
HDZ10	zip ties, zip tie length 4.5"	10	
HDZ1	1 Zip tie with push insert holder, zip tie length	1	
HDB1	Battery nuts 6mm	1	
Sticker		2	
CANBU-68-1	Wire harness with dual light plugs and battery terminals	1	
Light-SQ60-V1	light with Deutsch connector	1	
Light-PRMO60-V1	Ranger Light Bracket Kit	1	

Straightline Backup Lights Straightlineperformance.com

Polaris Ranger Reverse Light Tech@straightlineperformance.com