


STRAIGHTLINE PERFORMANCE

2013-18 Polaris 600 Rush/Switchback/RMK Lightweight Muffler 132-115 High Temp Black Coated Installation Instructions

1. Remove the existing stock muffler from the machine. On the 600 Polaris it will be easier to remove the stock single pipe to help aid in the muffler removal.
2. On the stock chassis be sure the rubber rests on the upper and lower brace stay in place during removal.
3. Next install the spring tab onto the chassis bolt as shown in the picture below.
4. Install the SPI lightweight muffler onto the 2 stock rubber mount locations and spring the muffler to the pipe and chassis. See picture below for spring areas. Be sure to use the correct length springs in the correct areas.

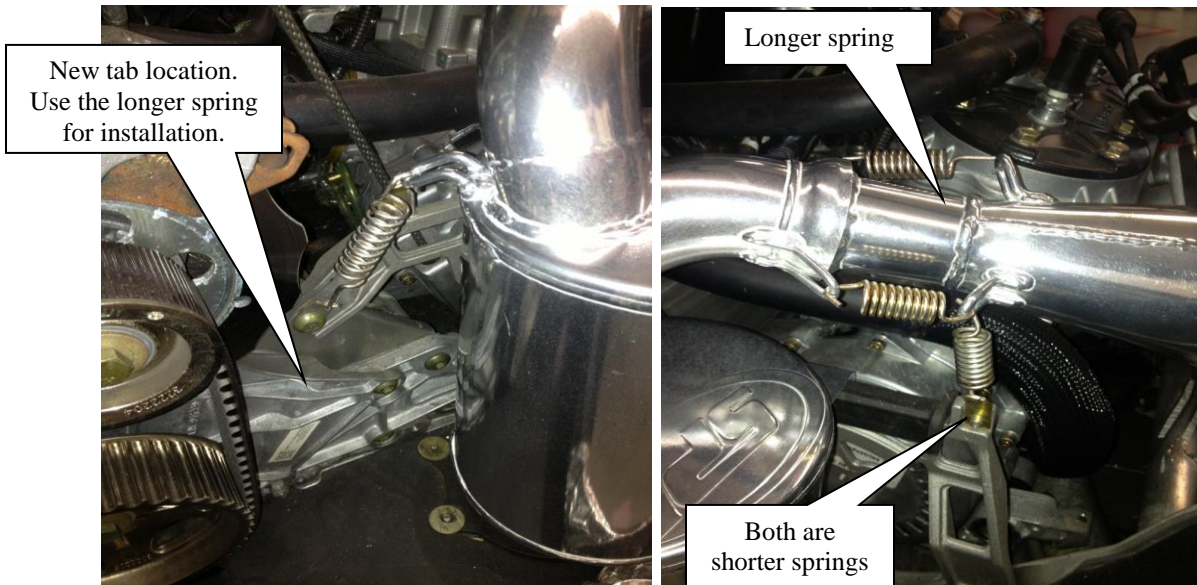

Warranty

Be sure the Straightline lightweight muffler has no manufacture defects. If the pipe has been run/used there are **no warranties** for fitment.

Specifications

Jetting Not Required use factory specifications.

Clutching Not Required use factory specifications.

Bill of Materials Included.

Quantity	Part #	Descriptions	In Box
1	132-115	Muffler	
1	WS-380	Spring Tab	
1		Sticker	
1		Directions	

Checked and Packaged By

Straightline Performance 15250 Hornsby St Forest Lake, MN 55025 651-466-0212 www.straightlineperformance.com
 Technical questions please email tech@straightlineperformance.com



Facebook @straightlineperformanceinc1 Youtube@straightlineperfinfinc Twitter@straightlineperfinfinc
 Straightline Performance 15250 Hornsby St Forest Lake, MN 55025 651-466-0212 www.straightlineperformance.com