


STRAIGHTLINE PERFORMANCE

132-116

2013-16 Polaris Rush/Switchback/RMK Lightweight Muffler

Installation Instructions

1. Remove the existing stock muffler from the machine. On the 800 Polaris it will be easier to remove the stock single pipe to help aid in the muffler removal.
2. On the stock chassis be sure the rubber rests on the upper and lower brace stay in place during removal.
3. Next install the spring tab onto the chassis bolt as shown in the picture below.
4. Install the SPI lightweight muffler onto the 2 stock rubber mount locations and spring the muffler to the pipe and chassis. See picture below for spring areas. Be sure to use the correct length springs in the correct areas.

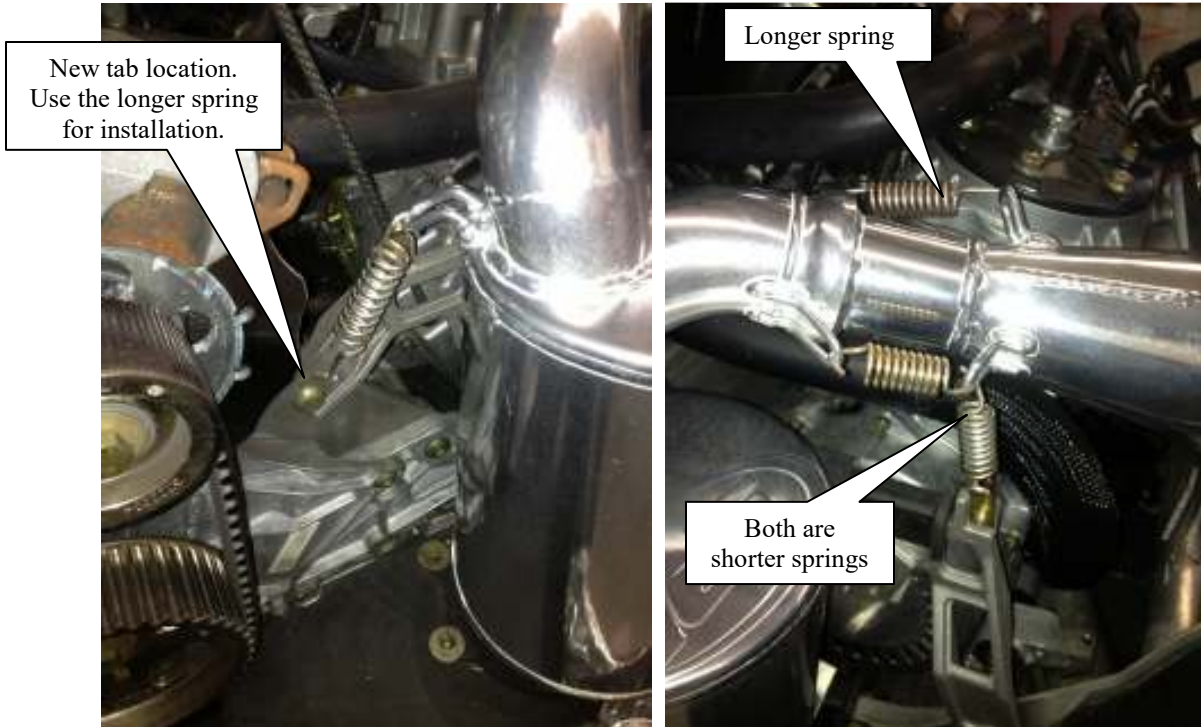

Warranty

Be sure the Straightline lightweight muffler has no manufacture defects. If the pipe has been run/used there are **no warranties** for fitment.

Specifications

Jetting Not Required use factory specifications.

Clutching Not Required use factory specifications.

Bill of Materials Included.

Quantity	Part #	Descriptions	In Box
1	132-116	Muffler	
1	WS-380	Spring Tab	
1		Sticker	
1		Directions	

Checked and Packaged By



Facebook @ straightlineperformanceinc
Youtube @ straightlineperfinc
Twitter @ straightlineperf



Care and Maintenance of Ceramic Coatings

Congratulations on having your parts ceramic coated. These coatings are highly durable and will last for many years with proper care. Their longevity and appearance may be affected by the way you maintain and care for the coating.

PLEASE NOTE: EXCESSIVE EXHAUST GAS TEMPERATURES CAN DULL CERAMIC COATINGS ON EXHAUST MANIFOLDS AND HEADERS.

The proper care and maintenance of your headers is important for maintaining a long lasting shine you will be proud of for years to come. For most maintenance, going over the part with a micro fiber or terry cloth using high quality metal polish is all that is required.

Keeping your exhaust system looking like new, is a simple task that is often overlooked or disregarded. However, those that take the time to properly clean and polish these components, not only have an engine compartment they are proud to show off, they greatly extend the service life of their exhaust components. While other bolt on items may be inexpensive to replace, custom headers and/or exhaust systems can be very expensive items. Especially if they are ceramic coated, chromed, or made from Stainless steel. Therefore it is essential to provide proper maintenance on a regular basis.

Exhaust system corrosion will occur if moisture (condensation) is present in the exhaust system. Make sure that the vehicle is driven at least 20 to 30 minutes, when ever the vehicle is started, to completely eliminate any moisture that is created by the combustion process. Failure to do so may result in the pipes rusting from the inside out (excluding stainless steel).

When storing your vehicle for an extended period of time, be sure the area is of low moisture as this will help from condensation producing rust. Wipe down the headers and dry thoroughly, then coat the headers with WD-40. Pay particular attention to the areas where the tubes are welded to the header flanges and where the tubes come in close proximity to each other. These areas are prone to rusting, as most coatings are unable to get between the tubes in these areas, during the coating process. If rust occurs, it will travel into and under the coating. When you are ready to start the vehicle after storage, remove the WD-40 by soap and water. Start the vehicle and heat the exhaust till all the moisture is out of the exhaust.

If you ever have any oil burned on or surface deposits from water, or other liquids, more aggressive measures will need to be taken. We have found that wet sanding the stained area with #0000 steel wool or extremely fine scotch brite is all that is needed to remove and then polish as you would when cleaning your headers.

POLISHING:

Once all foreign matter has been removed, the thermal barrier coating may be polished with a clean soft cloth and a non-abrasive metal (aluminum) polish such as Satin Gloss, MAAS, Mothers Mag and Wheel Polish, Blue Magic, Metal Magic, or Eagle One Mag Polish. For the satin finish a periodic scrubbing with a red or gray Scotchbrite pad may be used to remove oils and contaminants from the coating surface.

Please keep in mind that we CAN'T get coating where there is no space between the metal, therefore these areas are subject to rust if the metal can rust. Also with used rusty parts there are places that the blasting media cannot reach to remove all the rust and the coating does not adhere to rust. Exhaust designs with open and/or removable tubes and welded flanges can last a LIFETIME!