

STRAIGHTLINE

PERFORMANCE

2008-16 Ski-doo 800R (carb version)134-146

Installation Instructions

Parts Included

- 1-Rubber Grommet 21003
- 1-Spring Tab WS-259
- 1-Rivet 41024


Tools Suggested

- Spring Tool
- Rivet Gun
- Drill
- 3/16" Drill Bit

- Remove the muffler and expansion chamber from the chassis.
- Drill out the rivet that secures the spring tab to the chassis. (pic 4)
- Relocate the spring tab to the hole on the right of the original location and rivet it to the chassis. (pic 5)
- Drill a 3/16" hole into the foot well support for the new spring tab (pic 1).
- Using a rivet gun and rivet attach the spring tab to the foot well support. (pic 1)
- Install the expansion chamber in the reverse order that it was remove.
- Install the rubber grommet from the kit over the bottom of the carbon fiber muffler. (pic 2)
- Place the carbon fiber muffler into the factory location and install the three springs that were removed in the first step.



(Pic 1)

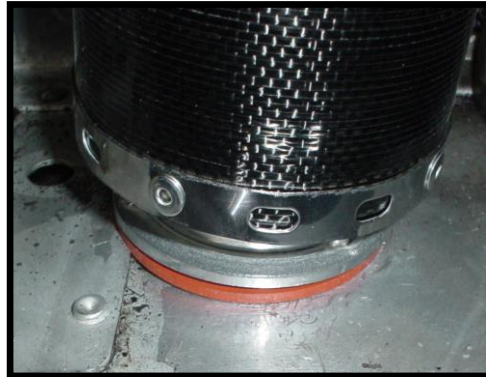


(Pic 2)



(Pic 3)



(Pic 4)

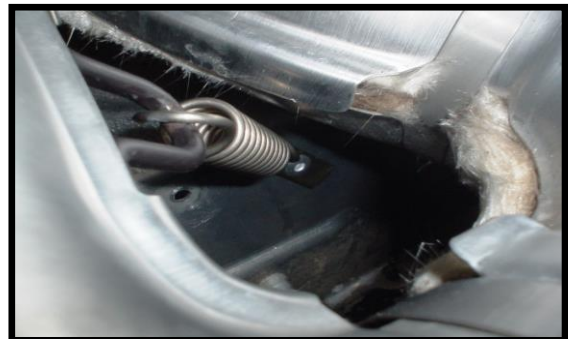

(Pic 5)

Be sure the muffler has no manufacture defects. If the muffler has been run/used there are no warranties for fitment.

- Jetting Requirements- No Jetting Required
- Clutching Requirements-No Clutching Required

Straightline Performance 15250 Hornsby ST NE Forest Lake, MN 55025 Phone 651-466-0212 Fax 651-466-0213