



## RSI Mountain Grab Bar installation instructions (Part # HA1001)

If mounting on machine without cross bar using grab bar, please see instructions with mount kit (HA1002).

**HARDWARE INCLUDED:**      **TOOLS REQUIRED:**

| <u>Qty</u> | <u>Description</u> |             |
|------------|--------------------|-------------|
| 1          | Grab Bar           | 13mm wrench |
| 2          | 8mm Jam nuts       | 14mm wrench |
| 2          | 8mm Nylock nuts    |             |


**Step 1:** install Jam nuts on grab handle finger tighten until nut is flush with rubber handle (**Do not use wrench or over tighten**)

Finger tighten until jam nut is flush with rubber (**Do not use wrench or over tighten**)  
**Repeat on opposite side**



**Step 2:** Install grab bar into eyelets on crossbar, (you may have to remove the Handlebar pad) install nylock nuts and tighten down

Install grab bar into eyelets on crossbar

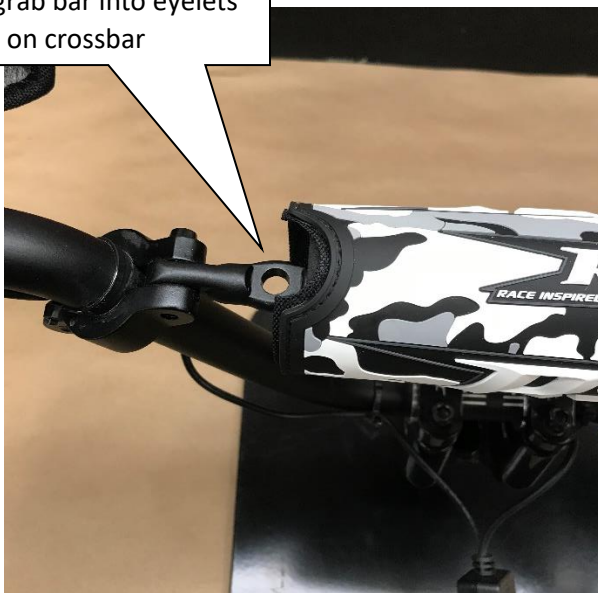

Install and tighten 8mm Nylock nuts on threaded stud and tighten – No need to over tighten Nylock Nut - **Repeat on opposite side**

**Step 3:** Reinstall bar pad and you're ready to rip!



**We love to see your customized sleds Tag us on social media: @rsiracing  
– you may even win some prizes for tagging/sharing to our pages!**

#### **LIMITED WARRANTY**

**RSI Racing** warrants this product to be free from defects in material and workmanship under use for the purpose it was intended.

**RSI Racing** shall not be liable for damage or injury caused by defective materials or workmanship. **RSI Racing** may elect to repair or replace this product, but RSI Racing is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effective for one year from the original purchase date.

**RSI Racing 15250 Hornsby St Forest Lake, MN 55025 208-994-6413 [www.rsiracing.com](http://www.rsiracing.com)**