






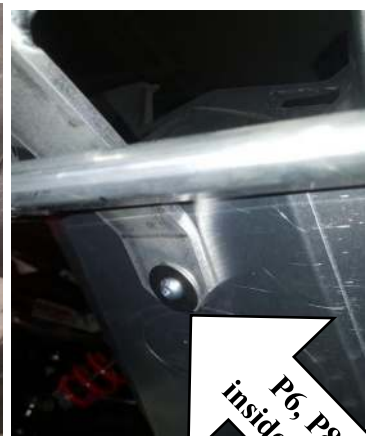


**Straightline Polaris MATRYX Rugged Series/ Sport Combined Skid Plate 182-119  
(Instructions and BOM)**

**Kit includes:**

<b>P9</b>	<b>Skid plate</b>		<b>QTY 1</b>	
<b>P6</b>	<b>7/8" Bolt</b>		<b>QTY 2</b>	
<b>P7</b>	<b>Nylock Nut</b>		<b>QTY 3</b>	
<b>P8</b>	<b>Fender Washers</b>		<b>QTY 2</b>	
<b>P9</b>	<b>1 1/4" Bolt</b>		<b>QTY 1</b>	

- Skid plate install:** flip machine on its side or elevate on a lift stand to gain access to rear holes on the skid plate. Drill Bottom holes (1/4" drill bit) to fit Straightline supplied hardware and mount lower skid plate. Removal of the exhaust pipe is recommended if it has not been done already.



**P6, P8 & (P7  
inside bulk head)**

Drill Bottom holes to Straightline supplied hardware and mount lower skid plate. Removal of the exhaust may be required.

Quantity	Item #	Descriptions	In Box
1	182-119	Skid Plate	
1	10200-11209	Skid Plate hardware	
1		Straightline Sticker	

**Checked and Packaged By**

Technical questions please email [tech@straightlineperformance.com](mailto:tech@straightlineperformance.com)