






# STRAIGHTLINE PERFORMANCE

## Straightline Ski-Doo G5 Series Skid Plate 183-242 (Instructions and BOM)

### Skid Plate instructions




P1	Skid plate		Qty 1
P2	3/4" Bolt		Qty 2
P3	5/8" Bolt		Qty 4
P4	Nylock Nut		Qty 6
P5	Washers		Qty 2

1. Elevate or flip machine on its side, then hold skid plate up for reference



2. Drill front two dimples on stock nose cone

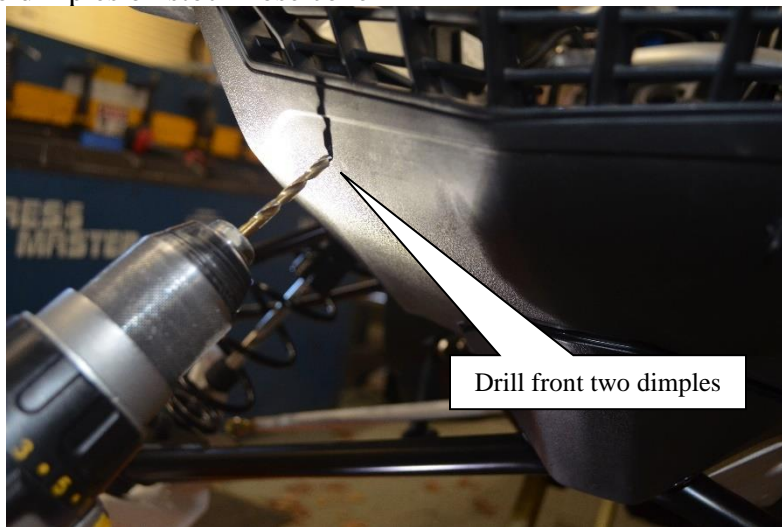

3. Mount skid plate with front two bolts (**short**) using supplied washers on the backside and tighten.



4. Using skid plate as a template push it flush with the chassis mark and drill bottom holes. Use long bolts and tighten sucking the skidplate around weld.



5. Using skid plate as a template drill final two holes. Then install and tighten bolts sucking skid plate up around the nose cone



**BOM**

<b>QTY</b>	<b>Item #</b>	<b>Description</b>	<b>In box</b>
1	183-242	Skid Plate	
1	100200-11203	Skid Plate Hardware Kit	
1		Straightline Sticker	

**Checked and Packaged By**

Technical questions please email [tech@straightlineperformance.com](mailto:tech@straightlineperformance.com)

Facebook @ straightlineperformanceinc

Youtube @ straightlineperfin

Twitter @ straightlineperf