




Ski-doo Gen 5 850 Summit Turbo – Silicone Intake Kit Installation Instructions 193-111

1. Remove hood per manufactures service manual instructions.
2. Loosen clamps on factory rubber hoses and remove
3. Install clamps on the SPI Silicone Intake tubes and install tubes with the same routing as the factory tubes.
4. Install hood being careful to guide the large diameter of the tube over the flange on the hood.
5. Use factory clamps where possible. Two clamps included for use on hood tube and airbox tube connection.

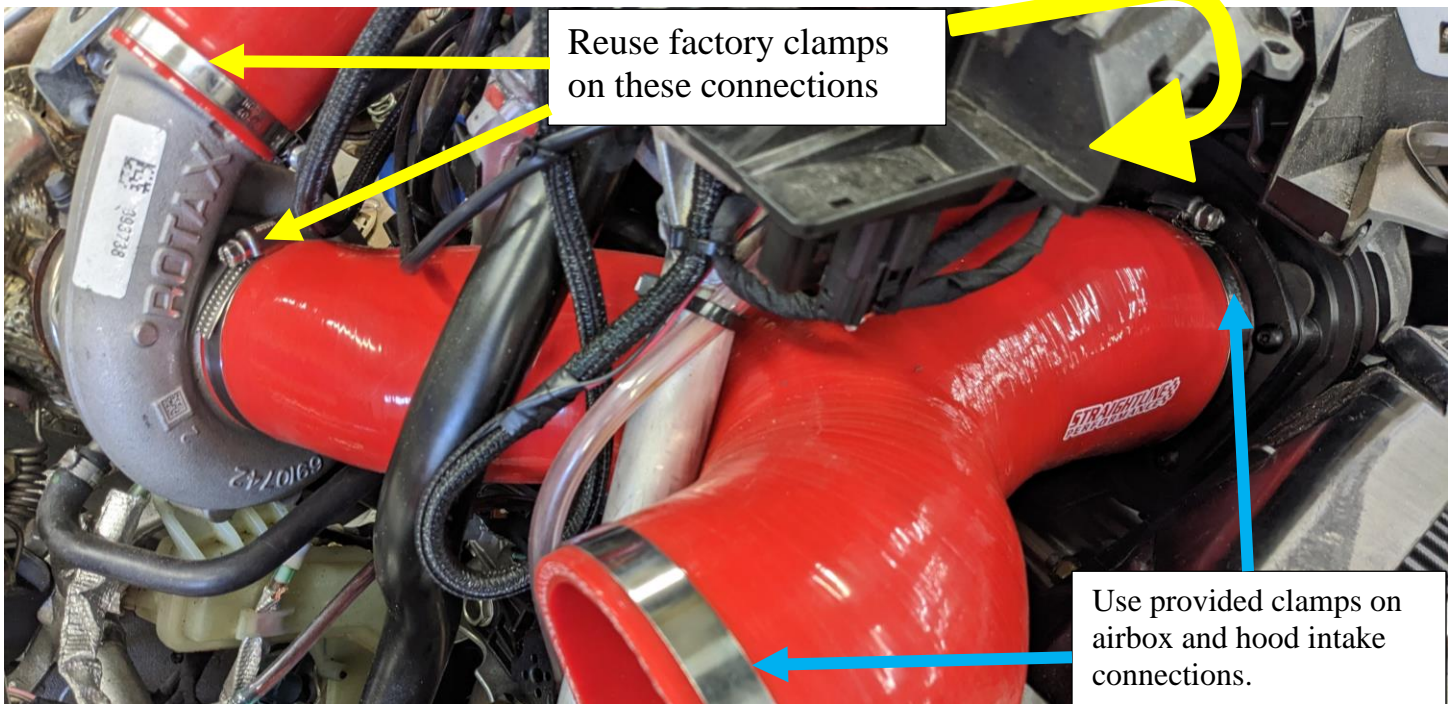

- Jetting Requirements- No Jetting Required
- Clutching Requirements-No Clutching Required
- Facebook @ straightlineperformanceinc1 - Youtube @ straightlineperfinc - Twitter @ straightlineperf
Technical Question Please Email Tech@straightlineperformance.com

: Bill of Materials (BOM)

| Qty | Part Number | Description | In Box |
|-----|---------------|-----------------------------------|--------|
| 1 | IT-113-166-S | Small pressure side silicone tube | |
| 1 | IT-113-166-G5 | Larger T silicone tube to hood | |
| 1 | | Medium clamp | |
| 1 | | Large Clamp | |
| 1 | | Instructions | |
| 1 | | Sticker | |