

STRAIGHTLINE PERFORMANCE

2012-17 BRP Can-Am Renegade 800//850/1000 Slip-on Exhaust
(242-113)




For ease of installation you may want to order BRP Exhaust Gasket Part Number # 707600430 available through Straightline Performance or your local BRP dealership. Stock exhaust comes with this part

Straightline Performance's BRP Renegade 800/1000 exhaust should be installed by a professional service installation center. Certified BRP dealers and Straightline certified performance centers are recommended for install and set-up. Straightline **highly recommends** the installation of a Dynojet Power commander PCV for optimum performance (part number 25-014). Email tech@straightlineperformance.com for fuel and ignition programming maps, or check online at www.straightlineperformance.com.

Step 1. Complete removal of the rear fender and stock muffler.

Removing the stock muffler will take some patience. Step one is complete removal of the rear fender.



- Unbolt the 2 side bolts holding the rear fender as shown in picture #1. This will need to be done on both sides.
- Unbolt the 4 tie down holders on the top of the rear fender (Picture #2).
- Unbolt the 4 rear bolts from the fender and then remove the entire fender (Picture #4).
- Unbolt the rear bumper from the chassis and remove (Picture #3).
- Last, the 2 bolts on the lower bumper. You do not need to completely remove the bumper, just enough to get the muffler installed.

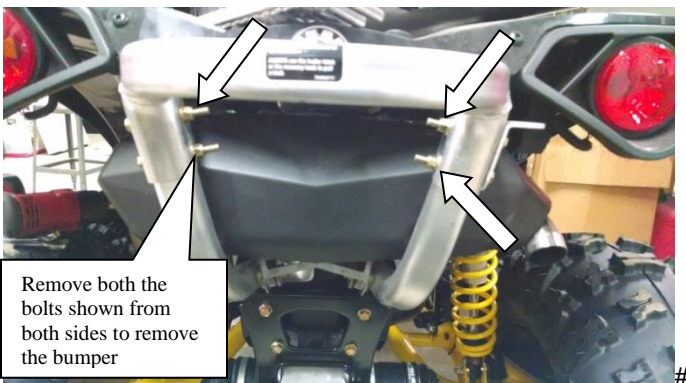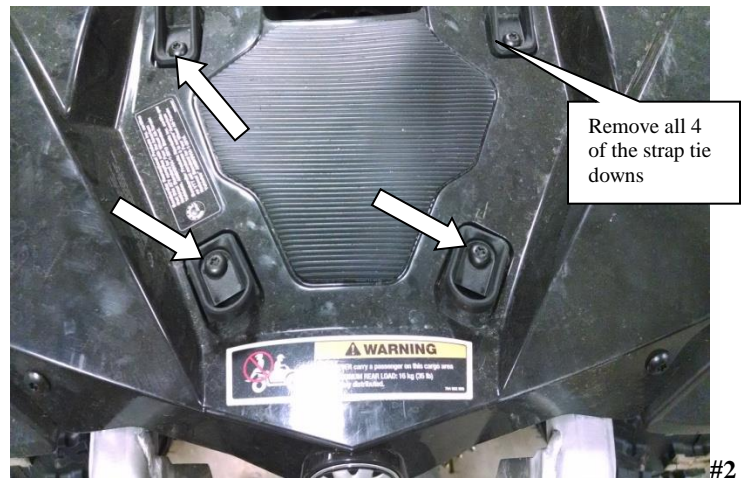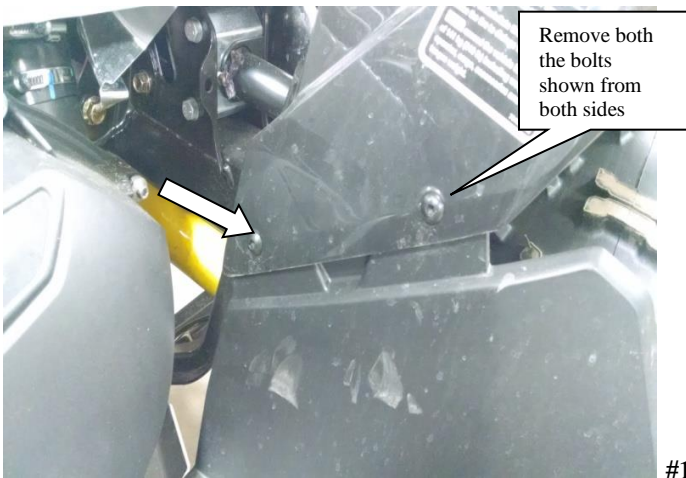

Straightline Performance 15250 Hornsby St Forest Lake, MN 55025 651-466-0212 www.straightlineperformance.com


Step2. Straightline Slip-On Installation.

1. Unbolt the 2 bolts on the top of the frame that bolt the bumper support to the chassis as shown in picture #5.
2. Remove the stock graphoil/exhaust gasket from the head pipe of the stock muffler and install into the Straightline head pipe.
3. Install the Straightline muffler into place using the stock header clamp.
4. Lift up and over the rear chassis brace to rest the muffler bracket onto the rear bumper. The top 2 holes will line up for mounting. These are 2 of the holes that the rear fender tie straps mount down too.

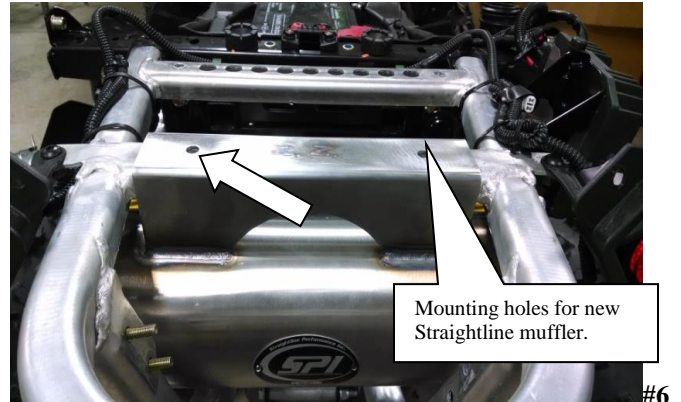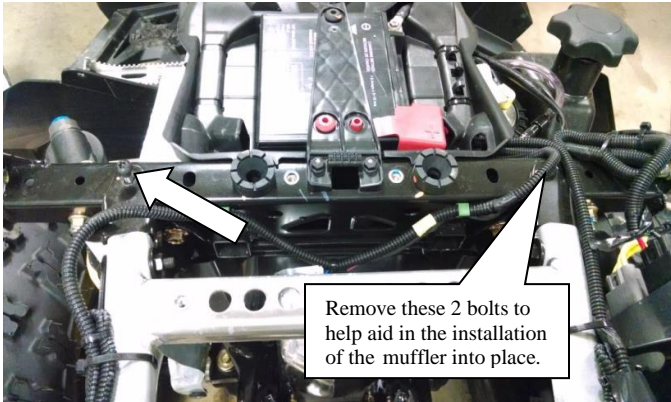

Step3. Assembly

1. Re-install the 2 bolts holding the rear bumper back on in picture #5.
2. Re-install the rear bumper and tighten all the bolts.
3. Re-install the rear fender and install the tie down bolts that install mount through and hold the new Straightline Pipe mounting. These are 2 of the holes that the rear fender tie straps mount down too.

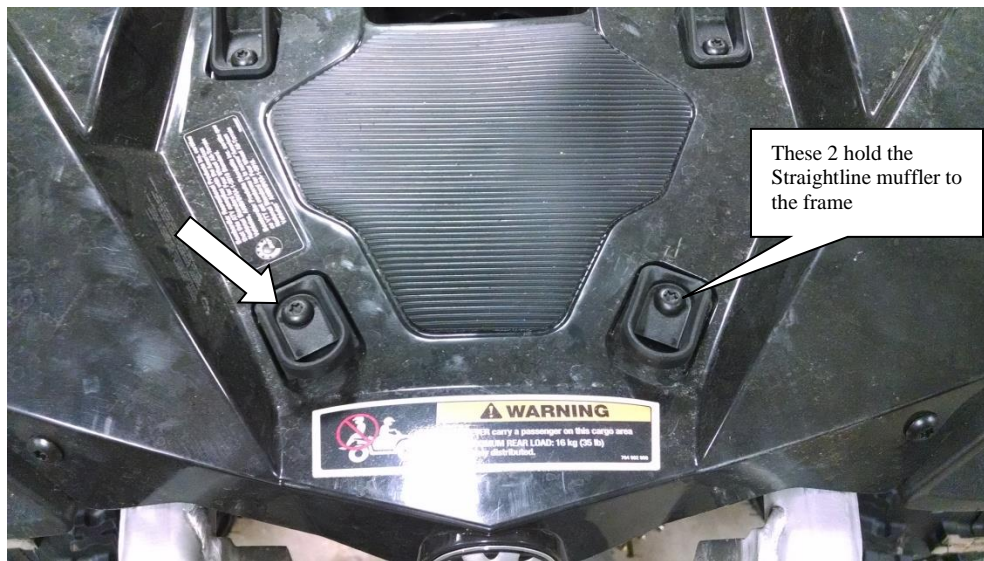

Straightline Performance 15250 Hornsby St Forest Lake, MN 55025 651-466-0212 www.straightlineperformance.com

BRP Can-Am Renegade 800/1000 Exhaust (242-113)

1	IT-242-113 Renegade Slip-On
1	Instructions
1	Sticker
1	94100-0188 Clamp
Checked by	

Technical questions can be answered at tech@straightlineperformance.com



Facebook @ straightlineperformanceinc
Youtube @ straightlineperfinc
Twitter @ straightlineperf