

STRAIGHTLINE PERFORMANCE

Yamaha Sidewinder / Arctic Cat Thundercat 998 Header

Installation and Set-up Instructions



Note: Be sure the Straightline exhaust has no manufacture defects. If the pipe has been run or used there are **no warranties** for fitment.

1. Installation of the header will take some time, as removal of multiple items will be required.
2. Disassemble the chassis components required to remove the gas tank and heat shield covering the stock header. Straightline does not provide instructions in gas tank and heat shield removal as this should be performed by a professionally trained mechanic.
3. After the gas tank and shroud are removed you can now remove the stock header. Simply unbolt the 6 nuts holding the stock header, and save the stock header gasket for future installation of the Straightline header.





Stock header bolts shown above remove all 6 and reuse on the new Straightline header.

STRAIGHTLINE PERFORMANCE 10317 Liberty Ln, Chisago City, MN 55013
www.straightlineperformance.com sales@straightlineperformance.com fax 651-466-0213

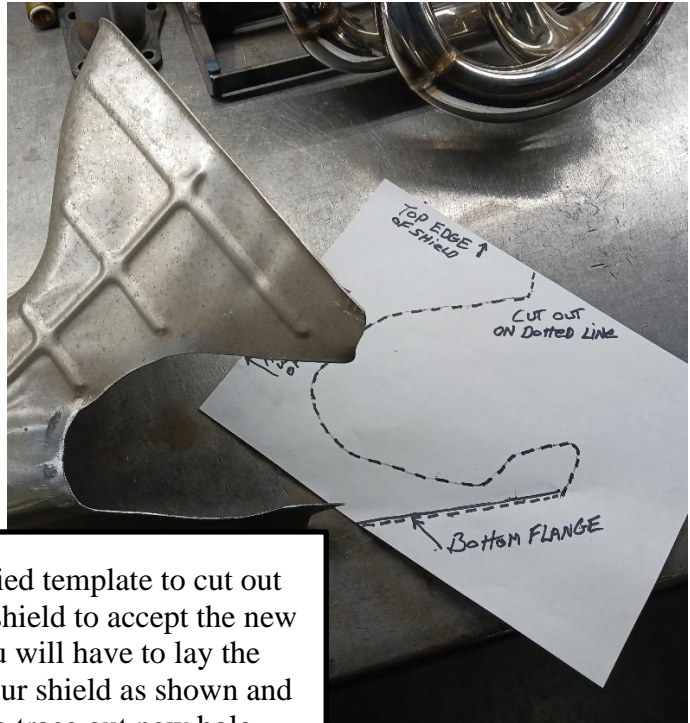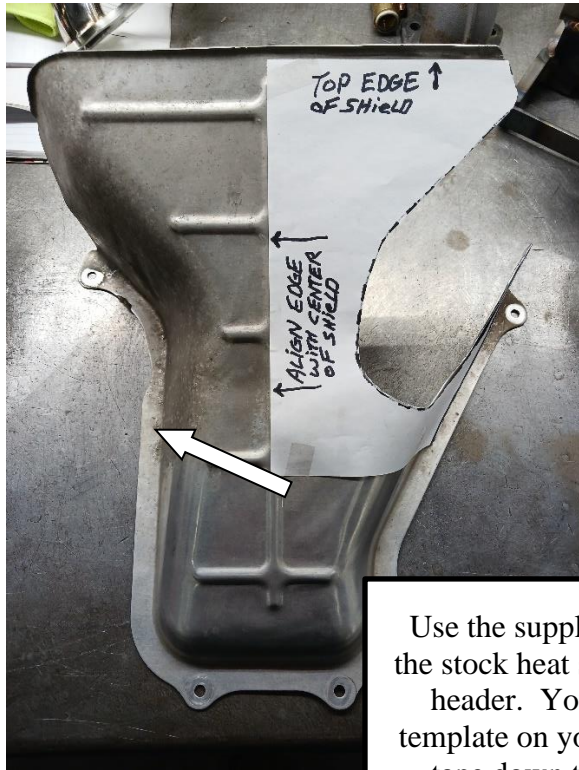


Use the supplied template to cut out the stock heat shield to accept the new header. You will have to lay the template on your shield as shown and tape down to trace out new hole. There is some room for play so its does not need to be perfect.

4. Removing and installing the heat shield requires unbolting the aluminum cover from the tunnel.
5. After removal you need to use the supplied template to cut out the cover to accept the new header. This does not need to be perfect. Line up as shown above, trace and cut out.
6. Next will be installing the side soft heat shield. This is done by simply using the stainless-steel zip ties. Wrap the zip ties around the header and through the holes. Lightly tighten and cut off excess.

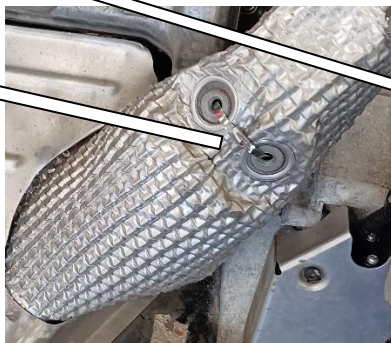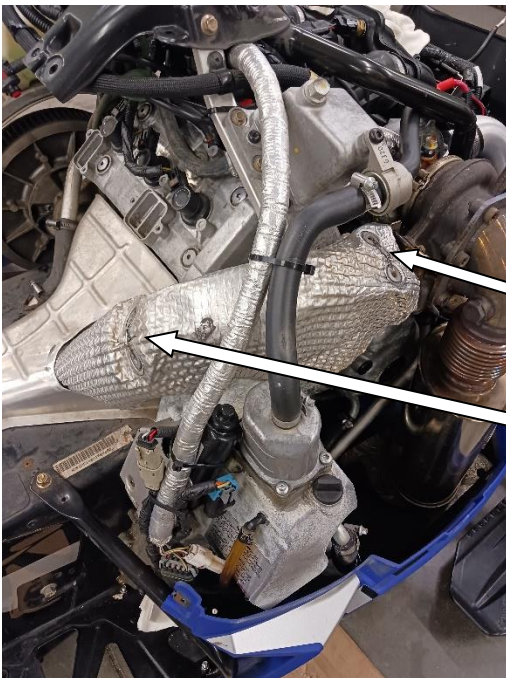

7. Lastly, re-install the aluminum heat shield and tighten all bolts. This will fit tight around the soft cover. Try and ensure there are no large gaps after installation.

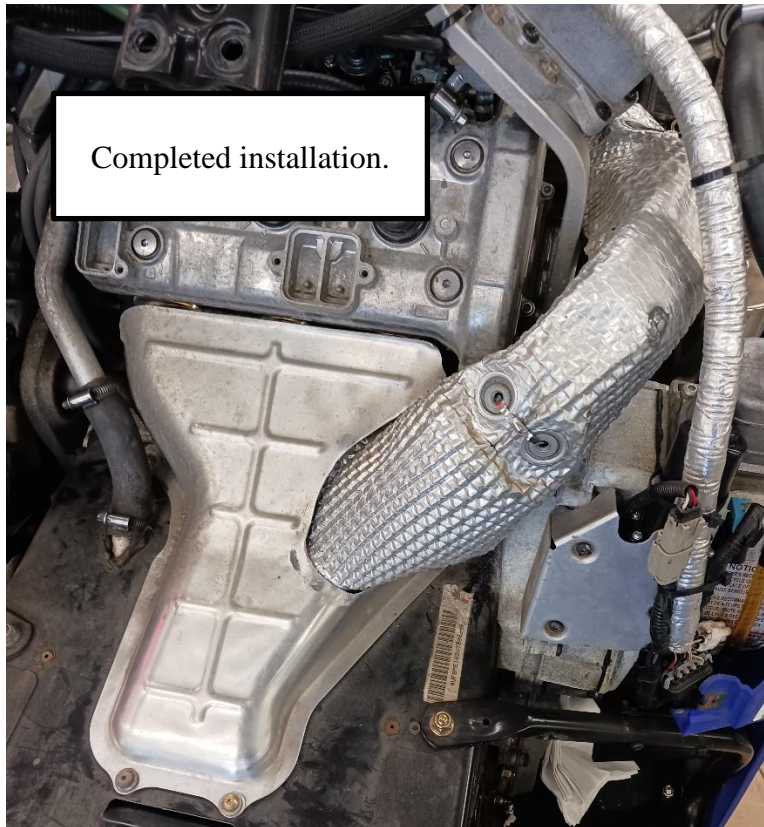

BOM

| Quantity | Part # | Descriptions | In Box |
|----------|---------|--------------------------|--------|
| 1 | 133-107 | Stainless Header | |
| 2 | S-13605 | 14" Stainless Steel Ties | |
| 1 | | Instructions | |
| 2 | | Sticker | |

Checked and Packaged By

| | |
|--|--|
| | |
| | |

Technical questions can be answered at tech@straightlineperformance.com

↑ ALIGN EDGE
WITH CENTER
OF SHIELD ↑

TOP EDGE ↑
OF SHIELD

