


STRAIGHTLINE PERFORMANCE

ATP (all terrain pro) Sled Dolly (151-128 & 151-129)



Use 3/8 x 1 bolts on the outside and 5/16 washers and 3/8 locknuts on the inside.

Install 5/8 washer then cotter key and bend cotter key after installation.

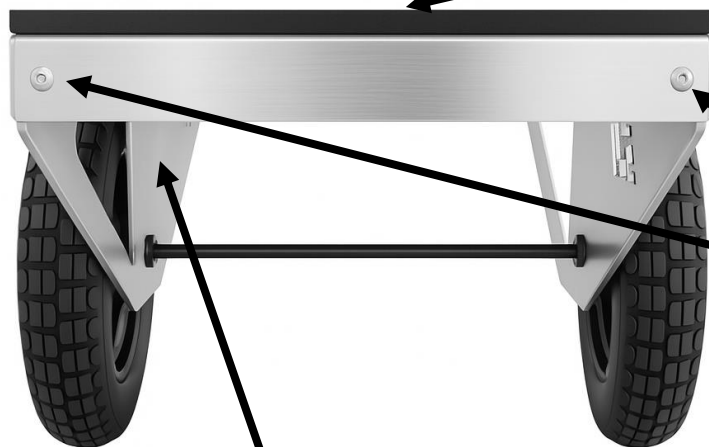

The mat is bolted down using the 8 holes with the 1/4 x 20 flat head machine screws through the rubber and the 1/4 washers and nuts and on the bottom. Tighten until the head of the screw is countersunk 1/16 of an inch only. **Do not Tight all the way.**

Use the 5/16 Bolts, nuts and 1/4" washers on this ends for assembly. You may have to slightly align to get the bolts to fall in.

The side plates are mounted to the inside of the top

NOTE:

Install the side plates on the axel and then into the top of the cart. This will be easy to assemble.

BOM:

Only 1 color will be marked

Quantity	Part #	Descriptions	In Box
1	IT-151-128-Top	Top Plate-Aluminum	
2	IT-151-128-Sides	Side Plates-Aluminum	
1	IT-151-128-Top Blk	Top Plate-Black	
2	IT-151-128-Sides Blk	Side Plates-Black	

1	IT-151-128-Pad	Rubber Top	
1	IT-151-128-Hardware	Complete Hardware Kit	
2	IT-151-128-Tire	Cart Tire	
1	IT-151-128-Axel	Axel Assembly	
2		Straightline Stickers	

Checked and Packaged By

Straightline Performance 651-466-0212

www.straightlineperformance.com

Technical questions please email **tech@straightlineperformance.com**



Facebook @ straightlineperformanceinc1

YouTube @ straightlineperfin